


OVERVIEW

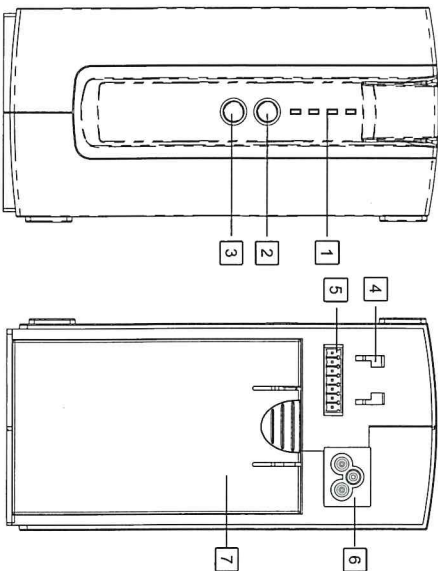


Number	Description
1	LED Indicator
2	Alarm Silence Button
3	Cold Start Button
4	Cable Retainer Installation Point
5	Communication Cable Connector
6	AC Power Cable Connector
7	Battery Cover

INSTALLATION

DESKTOP USE:


- 1.) Open the battery door at the back of the DTC36U12V and connect the battery wires.
- 2.) Plug AC power cable into wall outlet.
- 3.) Connect the communication cable and simply place the DTC36U12V unit on or underneath desk to begin backing up the optical home network.

WALL MOUNT USE:

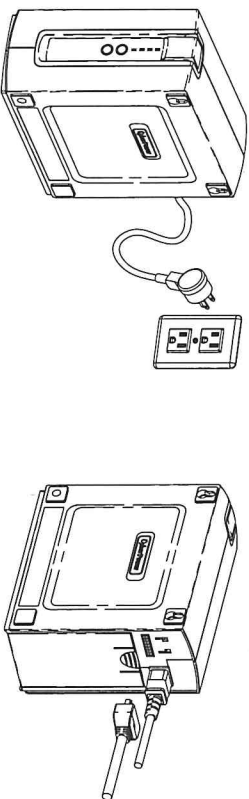


Step 1:
Connect the AC cable to the wall outlet.

Step 2:
Connect the communication cable between the DTC36U12V and the ONT device.

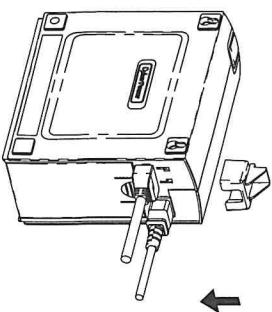


Step 3:
Install the cable retainer to secure the communication cable.

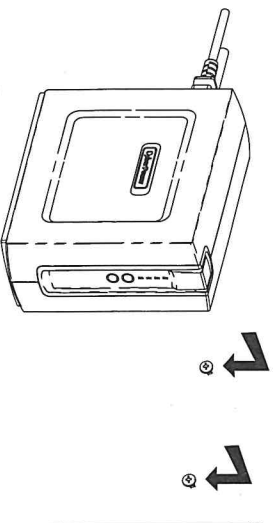


Step 4:
Use the enclosed wall mount template to locate screws on the wall. Hang the DTC36U12V on the screws which are located on the wall.

BATTERY REPLACEMENT


This battery is hot-swappable. As long as utility power is on, you may leave the UPS and connected equipment on while replacing a new battery.

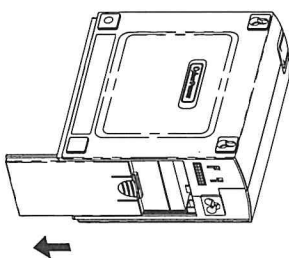

Step 1:
a. Slide off the battery cover at the back of the DTC36U12V unit.

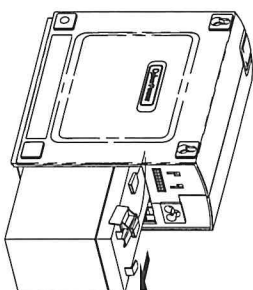

Step 2:
a. Remove the battery from the enclosure.
b. Disconnect both battery cable connectors.

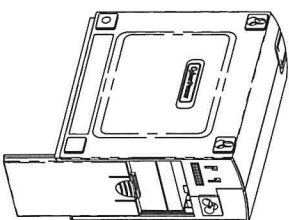

Step 3:
a. Install the new battery by connect the red lead to the positive terminal and the black lead to the negative terminal.
b. Slide the battery back into the compartment.
c. Replace battery cover to resume normal operation.

OPERATION

Connect equipment and power:

- Step1. Plug the UPS power cord into the utility power cord inlet.
- Step2. Plug the UPS power cord into the wall outlet.



The UPS battery charges when it is connected to utility power. The battery charges fully during the first **24 hours** of normal operation. Do not expect full battery run capability during this initial charge period.



Once the battery is disconnected, the connected equipment is not protected from power outages.



Deliver spent batteries to a recycling facility or ship to the manufacturer in the replacement battery packing material.

Pb

ALARM SILENCE

The audible alarm will be enabled when the unit is operating from battery or battery power is low. Press the Alarm Silence button for 0.5 seconds, the unit will beep once confirming that audible alarms have been temporarily disabled for 24 hours. Press this button one more time for 0.5 seconds to enable audible alarms again. The unit will beep twice confirming that audible alarms have been enable. Or press and hold the Alarm Silence button for 15 seconds the units will beep once confirming that audible alarms have been disabled permanently. To restore the audible alarm, press and hold the Alarm Silence button for 15 seconds and the unit will beep twice confirming that audible alarms have been enabled.

COLD START

The cold start feature is to supply power to the UPS and connected equipment when the UPS shuts down and no utility power is available. Before using the cold start feature, please make sure that the battery is properly charged. To turn on the cold start feature, please press and hold the cold start button until 4 LED indicators light up.